


## Service Sheet 18 – Harrogate Body Removal

1		Unscrew the chimney
2		Remove two screws holding the cab to the footplate
3		With a small screwdriver remove undo the two screws holding the smokebox to the frames.



From underneath remove the other two screws holding the smokebox to the chassis.

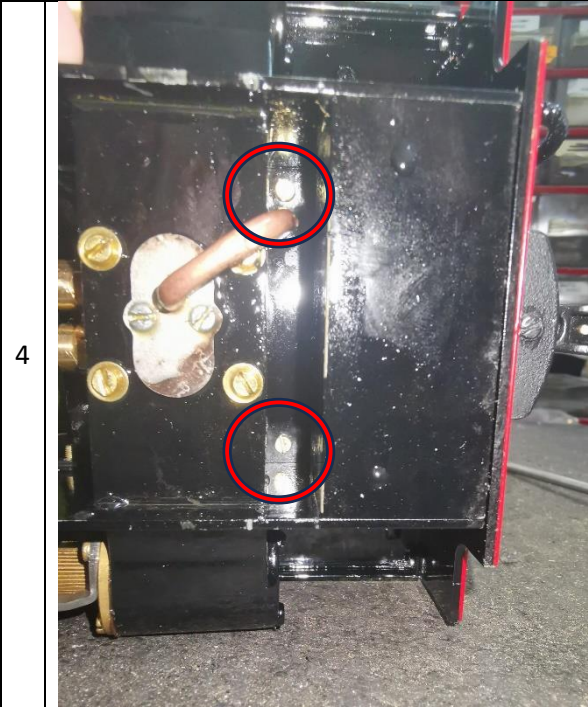

Remove the two screws either side of the loco fixing the rear frame spacer to the frames.



This should release the rear of the cab with the rear buffer beam.

7 The cab work and smokebox wrapper should now be free to be lifted off the boiler. Reverse the operation to refit.